

## Darning 1

The Memory Craft series automatically darns rips and holes.

The maximum darning area is 2 cm (3/4") long by 0.7 cm (1/4") wide.

Machine Settings:



Foot: Buttonhole Foot R

Foot Pressure: 3

Thread Tension: 4.2

Needle Thread: All-Purpose Thread

Bobbin Thread: All-Purpose Thread

Tip:

- \* For extra support, or to strengthen the darn, pin or baste a backing fabric to the wrong side of the fabric to be darned.

1. Attach buttonhole foot R, and fully extend the button holder.
2. Place a corner of the fabric under the foot. Press the Needle Up/ Down button twice. Draw the threads to the left side to ensure the threads are under the foot.
3. Place the fabric under the pressure foot. Lower the pressure foot and start sewing. The machine will sew 16 rows of darning stitches.
4. If the area to be darned is uneven, press the plus or minus key to adjust the length of the rows of stitches as necessary.