


Flat-Felled Seams

Flat-Felled seams prevent fraying and give a neat appearance to your creations. Use zigzag foot A and the 6 mm hemmer foot (optional foot) for a clean, precise finish. Since seams finished with an overlock machine will show through with thin fabrics such as lace, tulle or georgette, use this technique to give a polished finish.

Machine Settings:

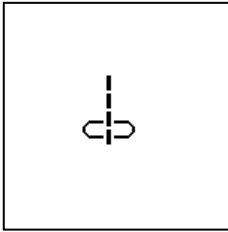

Foot: Zigzag Foot A

Foot Pressure: 3


Needle Position: Center

Stitch Length: 2.0 - 3.0

Thread Tension: 4.2

Needle Thread: All-Purpose Thread


Bobbin Thread: All-Purpose Thread

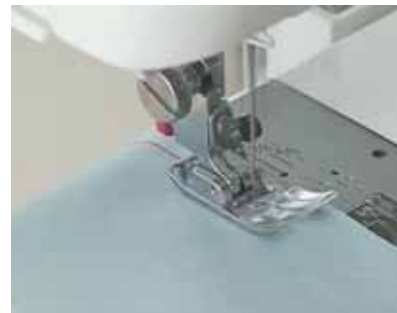

1. Sew with wrong sides together and the edge of the fabric aligned with the edge of zigzag foot A to form a 1 cm (1/2") seam allowance.
2. Trim the bottom seam allowance to 1/4".
3. Press the seam open, with the larger seam allowance turned to one side.



Machine Settings:

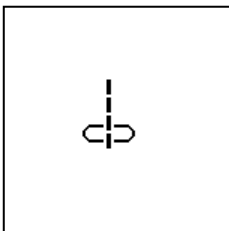

Foot: 6 mm Hemmer Foot (optional foot)

Needle Position: Center

Stitch Length: 2.0 - 3.0

Thread Tension: 4.2

4. Attach the 6 mm hemmer foot.
5. Place the fabric under the foot. Insert the larger seam allowance into the curl of the foot, and start sewing.