


## Tacking

Tacking stitches are used to reinforce pockets, zippers and belt loops.

Machine Settings:

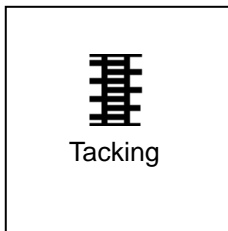

Foot: Satin Foot F

Foot Pressure: 3

Stitch Width: 2.0

Stitch Length: 1.5

Thread Tension: 2.0 - 2.2

Needle Thread: All-Purpose Thread

Bobbin Thread: All-Purpose Thread

1. Place the fabric under the foot.
2. Depress the foot control, sew the required length, and then press the reverse button to set the tacking length.
3. To sew another tack of the same size, simply restart the machine and it will stop automatically when finished sewing.

Tips:

- \* Use the following settings to tack webbing handles onto bags:  
Stitch Width: 5.0      Stitch length: 2.5
- \* In the sewing application mode of the MC10001 and MC11000, lengths of 0.7 cm (1/4"), 1.0 cm (1/3") and 1.2 cm (1/2") have been preset.